



UBA SPARE WHEEL TRAY & TABLE FITTING INSTRUCTIONS:

1. Insert the hardware (do not tighten) into the appropriate holes on the tray and leg sections according to the tyre size of the spare wheel.
2. Adjust the table brackets accordingly.
3. Once satisfied that the adjustments are correct, tighten all the hardware.
4. Position the UBA SPARE WHEEL TRAY & TABLE front, rear and level.
5. Feed the two supplied ratchet straps through the slots in the four feet and firmly tighten.
6. Give the SPARE WHEEL TRAY & TABLE a vigorous shake to ensure it is secure.
7. Regularly check that the ratchet straps are tight and in place.

8. Adjust the centre bracket so that the anti-loose passes through the hole in the table cleanly.